

Mini Operator Guide


What is SiteZone?

SiteZone is a proximity warning system designed to alert a vehicle operator if a pedestrian wearing a SiteZone tag approaches too close to their vehicle.

How do you work with SiteZone?

The SiteZone system **must** always be plugged in and operating.

This will activate the exclusion zone around the machine (pre-set to a specified distance up to 10m.)

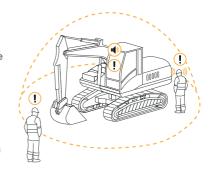

Before Machine Start Up


- Only one tag, your tag, must be present
- Check there are no other tags, including other drivers, in the zone of your machine

Start Up

- When system is powered, the RED LED will flash at a 1 second interval
- Press the RED acknowledge button on the unit to complete self-test sequence
- RED LED will now be off, and the external alarm beacon (if fitted) will flash to show the system is active
- If you cannot acknowledge your tag, and the system continues in alarm mode, then there may be another tag in the zone, or the system is faulty
- The system is now activated

When a tag is detected (zone breach)

- RED LED will flash
- External alarm will sound
- You should put the machine into a safe state
- When the pedestrian leaves the zone the alarm will stop and the RED LED will turn off after 3 seconds

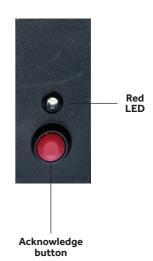

When multiple tags are detected (multiple zone breaches)

- The RED LED will flash in line with the number of tags in the zone
- The external alarm will continue to sound until all pedestrians have left the zone
- Do not press the **red button** if safety protocols have not been followed

To authorise an approach in line with existing safe systems of work

- If the correct site protocol has been followed (often thumbs up), put the machine into a safe state
- As the pedestrian enters the zone, the alarm will sound
- Press and release the RED acknowledge button
- The **RED LED** remains lit, but the alarm stops
- You will need to repeat this process for each pedestrian that you authorise into the zone
- Only when the pedestrian has left the zone for more than 3 seconds, will the **RED LED** disappear
- Only restart work when it is safe to do so

Power Off

Before leaving the vehicle, ensure your vehicle is turned off

Fault Modes

The SiteZone PWS must not be used in any of these states and should be reported immediately:

- No Driver Tag Detected The RED LED will flash in bursts of 10 pulses
- Antenna Failure / Disconnect The RED LED will flash in bursts of 12 pulses







